



Beyond Energy Solutions

Better energy balance for buildings with smart UV technology


Beyond Energy Solutions (BES), an Australian company providing sustainable energy solutions, have applied innovative Heraeus UV technology to successfully improve the energy balance of a large commercial building.

Description of the initial situation

Beyond Energy Solutions' client operates a large commercial building, which is open to the public 24 hours per day, 365 days per year. BES needed to reduce the building's energy and emissions profile, whilst simultaneously increasing the effectiveness of the HVAC (Heating, Ventilation and Air Conditioning) system. With Heraeus Noblelight, they found a reliable partner to develop a suitable UV solution.

Development of a new solution with UV light

UVC is effective in destroying biofilm and restoring a HVAC's system to near original performance characteristics. Heraeus developed Cold Air Disinfection (CAD) lamps to provide a high dosage of UVC light whilst operating in a cold airstream (4-7°C). After a successful trial, BES installed UVC in all 46 of the building's HVAC Air Handling Units.

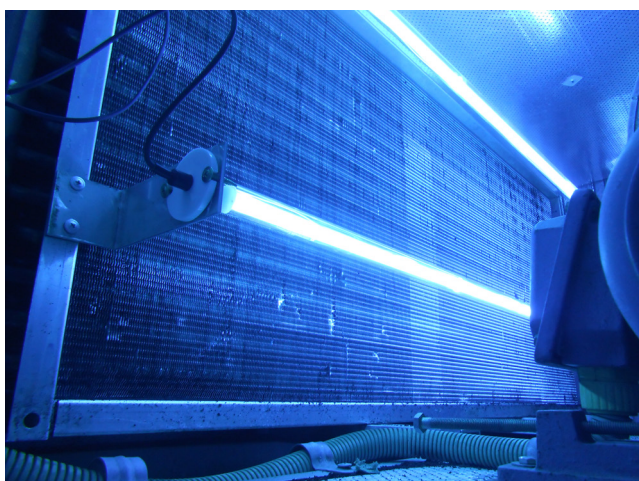

HVAC Air Handling Unit in use
Photo: Beyond Energy Solutions

Features

- Significant reduction of building's energy and emissions profile
- Improved indoor air quality
- Extension of HVAC lifespan
- Reduction in maintenance costs
- Reduced compressor operating times (through improved heat transfer)
- Reduced fan operation and speed (through increased airflow through the coils)
- Increased entering chilled water temperature (to achieve heat transfer)
- Reduced chiller and compressor operations (through faster achievement of temperature and humidity parameters)

Technical Data

- CAD lamps
- Low pressure lamps

After just 3 months of operation, CAD units delivered a minimum of 20 % improvement in airflow, heat transfer and energy savings. Furthermore, IAQ (Indoor Air Quality) improved dramatically and eliminated manual duct and coil cleaning. The CAD lamps provide a very high UVC output and are maintenance free. Beyond Energy Solutions provided an innovative UV solution with a short return on investment - with multiple benefits for their client.



HVAC Air Handling Unit before UVC installation
Photo: Beyond Energy Solutions



HVAC Air Handling Unit after UVC installation
Photo: Beyond Energy Solutions

UV solution contact:

www.heraeus-noblelight.com

Germany*

Heraeus Noblelight GmbH

Heraeusstraße 12-14

63450 Hanau

Phone +49 6181 35 4499

Fax +49 6181 35 164499

hng-info@heraeus.com

Installation contact:

Australia

Beyond Energy Solutions Pty Ltd

52 MacDonnell St,

NARACORTE, SA 5271

Phone +61 8 876 22406

Mobile +61 487 881 123

simon.dunn@beyondenergysolutions.com.au

www.beyondenergysolutions.com.au

www.beyondenergysolutions.com.au



* For local contacts please visit also our website http://www.heraeus-noblelight.com/en/contact_1/regional_contact.aspx